


HOW TO INSTALL YOUR MAGNETIC SECONDARY GLAZING KIT

**Helping to keep your property warmer
this winter**

STEP 1. UNBOX

**Remove your acrylic sheet from its packaging
and double-check the sheet is the correct size for
your window frame.**

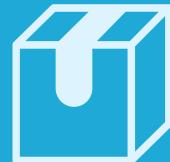

STEP 2. PREPARE

**Clean the window frame to make sure that it is
free from any dirt or substance that can affect the
magnetic strip.**



STEP 3. MEASURE

**Take your cut to size sheet material out of the
packaging and lay it down flat. Measure all sides
of the sheet.**



STEP 4. CUT

**Cut the magnetic tape according to the
measurements of each side of the window. Cut two
strips per side.**



STEP 5. ATTACH

**Take your matching sized magnetic strips and place
the two magnetic sides together to create a seal.
Keep the two magnetic edges stuck together.**



STEP 6. PEEL & STICK

Remove the protective film on one side of the acrylic sheet. Peel off one side of the film on the magnetic strip. Stick the strip onto the edge of the acrylic leaving approx. 1 - 2cm's of space from the edge



STEP 7. CHECK

Make a final check to ensure that the magnetic strips match up to the window frame.



STEP 8. STICK

Peel off the other protective film on the magnetic strips and stick it onto the window frame. Make sure to press firmly on all of the edges of the acrylic.




STEP 9. REMOVE

Finally, peel off the protective layer that is left on the acrylic sheet. Your magnetic secondary glazing kit is now installed.



HINTS & TIPS

- Clean your window frame with a degreaser that does not contain any harsh chemicals as it may affect the acrylic
- The bigger the gap between the window and the acrylic sheet, the more effective it is
- Double-check that you are sticking the magnetic strips the right way. They should align perfectly with no gaps or bumps.

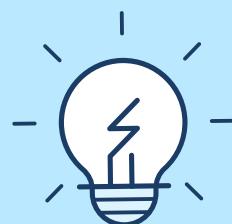

HAVE ANY MORE QUESTIONS?

Please contact our sales team on 01752 917434 or at info@cutplasticsheeting.co.uk